

E.D.R. I Control Systems

RPM Style: SET RPM Speed

Remote RPM Switch Style: 2 position (on/off)

Pin# 1 - Tee into the ground side of the PTO light wire allowing the engagement of the PTO to activate the E.D.R. Control System or connect to chassis ground.

Pin# 2 - Not used.

Pin# 3 - Refer to the ECM Guide Sheet.

Pin# 4 - Not used.

Pin# 5 - Join to the radio remote Set RPM wire (12 volt output).

Pin# 6 - Refer to the ECM Guide Sheet.

Pin# 7 - Not used.

Pin# 8 - Refer to the ECM Guide Sheet.

Pin# 9 -Not used.

Pin# 10- Not used.
