

E.D.R. I Control Systems

RPM Style: Variable Speed

Remote RPM Switch Style: 3 Position (mom-on/off/mom-on)

Pin# 1 - Tee into the ground side of the PTO light wire allowing the engagement of the PTO to activate the E.D.R. Control System.

Pin# 2 - Refer to the ECM Guide Sheet.

Pin# 3 - Refer to the ECM Guide Sheet.

Pin# 4 - Join to the radio remote decrease wire (12 volt output).

Pin# 5 - Join to the radio remote power up wire (12 volt output). (See Note 1)

Pin# 6 - Refer to the ECM Guide Sheet

Pin# 7 - Refer to the ECM Guide Sheet.

Pin# 8 - Refer to the ECM Guide Sheet.

Pin# 9 - Join to the radio remote increase wire (12 volt output).

Pin# 10- Refer to the ECM Guide Sheet.

1)Note: This wire sends 12 volts to pin# 5 when the radio remote is started or to Key Switch Power.